

Tuya Smart Bluetooth & Fingerprint Chain Lock

User Guide



Fingerprint
Unlock




Smart Life
APP access



Rechargeable
Battery



IP65
Waterproof

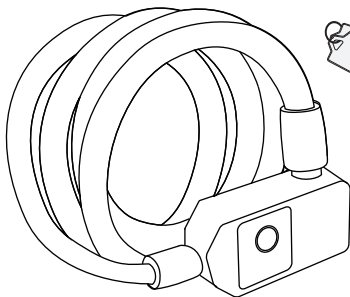

Smart Life



Revision: C3V3.0, Date: 03-April-2021

1. Know your lock

- ① Lock chain & free end
- ② LED indicators
- ③ Fingerprint reader
- ④ Micro-USB charging port
- ⑤ Keyhole
- ⑥ Solid Lock body



Note:

Please finish the registration and set your fingers to access the lock via mobile APP once received.

2. Understand your lock status

LED indicates	Beep sound	Status / Notifications
Battery status indication		
○ Blinking Red (after unlocked)		Low power alert
○ On Red (Solid)		Charging
○ Lights Off		Charged
Working status indication		
○ Blinking Green	di.	Unlocked
○ Blinking Red	di.	Unlock failed
When adding fingerprints		
○ On Blue	di.	Waiting for press
○ Blinking Green	di.	Recognized
○ On 1 second	long di~	Finger registered

3. Download the mobile APP

You can search **Smart Life** on iOS APP Store (Apple) or Google Play Store (Android), or scan the QR code to download the Smart Life APP.



*Please stay close to the lock within 5 meters for APP connection, access and other operations.



4. Connect your lock with APP

4.1 Open the APP, register an account.

4.2 Press the fingerprint reader to unlock.



4.3 Tap  on APP.

4.4 Tap "Go to add" .

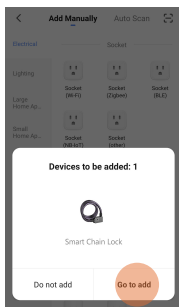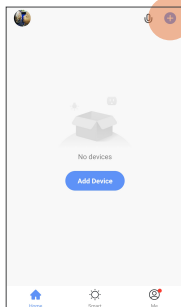

4.5 Tap ✓.

4.6 Long press 🔒 to test lock-app connection.

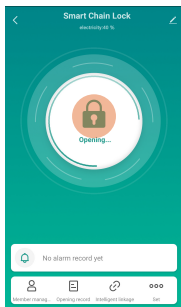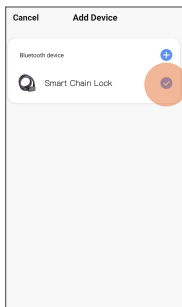


5. Add your fingerprints

5.1 Tap ○○○ on the bottom-right corner.


5.2 Tap 🖐️

5.3 Tap +

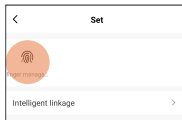



5.4 Tap >

5.5 Tap "Start" .

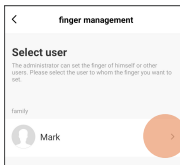

5.6 Press the fingerprint reader (of your lock) more than 5 times at slightly different angles until successfully recorded.

5.7 Give a name of the finger you've just added.

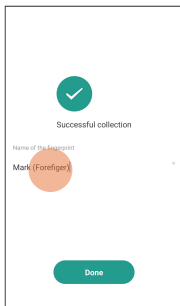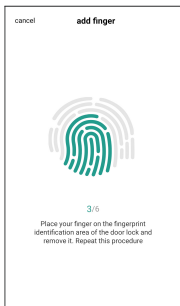

6. Disconnect (Reset to factory mode)

6.1 Tap  on your lock's homepage (top-right).



6.2 Tap "Remove Device" .

6.3 Tap "Disconnect and clear data" .


Cautions!

All fingerprints you had set and unlock logs will be deleted if you choose "disconnect and clear data" .

6.4 Tap "Confirm" to disconnect the lock with your APP account, now the lock is reset to factory mode (everyone is able to unlock it).

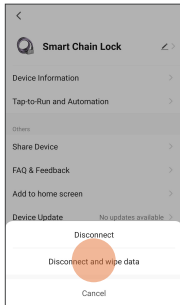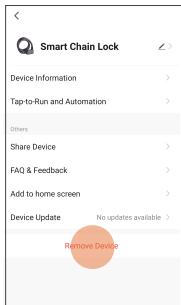

7. More functions

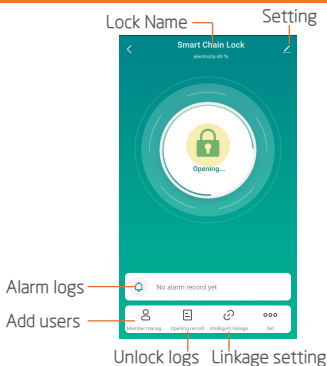

Alarm logs

Wrong finger attempted alarm, battery low power alarm and others.

Users

Add/manage/remove family members or friends or visitors (by adding their app account) to your lock so they can access your lock at the designated time period or permanently.

Unlock Logs

A list of unlock records.

Linkage setting

You can set "if this then that" linkage on this function.

8. Specifications

Bluetooth Version: 4.2

Fingerprint Resolution: 120*120

Fingerprint storage: 10 sets

Rechargeable Battery: 3.7V/200mAH

Charging Power: DC5V/0.5-2A

9. Low power alert

The lock blinks red few seconds after unlocking if battery on low power status, please recharge it by an universal USB DC5V/0.5~2A adaptor.

Environmentally Friendly Disposal



Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.